

MOONFLOWER HP

DMX CONTROL TABLE



2-CHANNEL MODE			
CHANNEL		VALUE	FUNCTION
CH1	Mode Selection	000 - 127	Music Control
		128 - 255	Auto Mode
CH2	Mode Options	000 - 255	Sensitivity/ Speed

5-CHANNEL MODE			
CHANNEL		VALUE	FUNCTION
CH1	Colour selection	000 - 015	Red
		016 - 031	Green
		032 - 047	Blue
		048 - 063	White
		064 - 079	Red/ Green
		080 - 095	Red/ Blue
		096 - 111	Red/ White
		112 - 127	Green/ Blue
		128 - 143	Green/ White
		144 - 159	Blue/ White
		160 - 175	Red/ Green/ Blue
		176 - 191	Red/ Green/ White
		192 - 207	Red/ Blue/ White
		208 - 223	Green/ Blue/ White
224 - 239	Red/ Green/ Blue/ White		
	automatic colour change	240 - 255	automatic colour change
CH2	mirror rotation	000 - 009	No movement
		010 - 120	clockwise slow to fast
		121 - 134	No movement
		135 - 245	clockwise slow to fast
		246 - 255	No movement
CH3	Stroboscope	000 - 001	No strobe
		002 - 255	slow to fast
CH4	Dimmer	000 - 255	0% to 100%
CH5	Colour change speed	000 - 255	slow to fast