

KLING TILE 144

DMX CONTROL TABLE



8 CH Mode						
Ch.	Function	Values			Sub-Group	
1	Dimmer	000	-	255	0% to 100%	Dimmer
2	Strobe	000	-	005	Strobe open	Strobe
		006	-	255	Strobe slow -> fast <1Hz - 20Hz	
3	Red	000	-	255	0% to 100%	Red
4	Green	000	-	255	0% to 100%	Green
5	Blue	000	-	255	0% to 100%	Blue
6	Colour Macro (override channel 2 - 5)	000	-	005	Colour off	Colour Macro
		006	-	013	Red	
		014	-	021	Amber	
		022	-	029	Yellow warm	
		030	-	037	Yellow	
		038	-	045	Green	
		046	-	053	Turquoise	
		054	-	061	Cyan	
		062	-	069	Blue	
		070	-	077	Lavender	
		078	-	085	Mauve	
		086	-	093	Magenta	
		094	-	101	Pink	
		102	-	109	Warm White	
		110	-	117	White	
		118	-	125	Cold White	
126	-	128	Colour Jumping Stop			
129	-	192	Colour Jumping Speed slow -> fast / Colour 1 -> 12			
193	-	255	Colour Fading Speed slow -> fast / Colour 1 -> 12			

7	Auto Program (override channel 2 - 6)	000	-	005	Auto Programs	Auto Program
		006	-	010	Program 1	
		011	-	020	Program 2	
		021	-	031	Program 3	
		032	-	042	Program 4	
		043	-	053	Program 5	
		054	-	064	Program 6	
		065	-	075	Program 7	
		076	-	086	Program 8	
		087	-	097	Program 9	
		098	-	108	Program 10	
		109	-	119	Program 11	
		120	-	130	Program 12	
		131	-	141	Program 13	
		142	-	152	Program 14	
		153	-	163	Program 15	
		164	-	174	Program 16	
		175	-	185	Program 17	
		186	-	196	Program 18	
		197	-	207	Program 19	
		208	-	218	Program 20	
		219	-	229	Program 21	
		230	-	240	Program 22	
		241	-	250	Program 23	
251	-	255	Program 24			
8	Auto Program Speed	000	-	255	Program Speed	

432 CH Mode						
Ch.	Function	Values				Sub-Group
1	Red	000	-	255	0% to 100%	Pixel 1
2	Green	000	-	255	0% to 100%	
3	Blue	000	-	255	0% to 100%	
4	Red	000	-	255	0% to 100%	Pixel 2
5	Green	000	-	255	0% to 100%	
6	Blue	000	-	255	0% to 100%	
427	Red	000	-	255	0% to 100%	Pixel 143
428	Green	000	-	255	0% to 100%	
429	Blue	000	-	255	0% to 100%	
430	Red	000	-	255	0% to 100%	Pixel 144
431	Green	000	-	255	0% to 100%	
432	Blue	000	-	255	0% to 100%	