

NANOSPOT 120

DMX CONTROL TABLE



5-CH Mode					
CH1	Mechanic Control	000	-	255	Pan Rotation
CH2		000	-	255	Tilt Rotation
CH3		000	-	255	Motor Running Speed (fast to slow)
CH4	Light Control	000	-	010	white
		011	-	021	red
		022	-	032	orange
		033	-	043	yellow
		044	-	054	green
		055	-	065	blue
		066	-	076	cyan
		077	-	087	purple
		088	-	175	colour selection (smooth shift)
		176	-	255	colour wheel rotation (slow to fast)
CH5		000	-	255	General Dimmer

9-CH Mode					
CH1	Mechanic Control	000	-	255	Pan Rotation
CH2		000	-	255	Tilt Rotation
CH3		000	-	255	Pan Fine
CH4		000	-	255	Tilt Fine
CH5		000	-	255	Motor Running Speed (fast to slow)
CH6	Light Control	000	-	010	white
		011	-	021	red
		022	-	032	orange
		033	-	043	yellow
		044	-	054	green
		055	-	065	blue
		066	-	076	cyan
		077	-	087	purple
		088	-	175	colour selection (smooth shift)
		176	-	255	colour wheel rotation (slow to fast)
CH7		000	-	015	Gobo open
		016	-	124	Gobo selection
		125	-	234	shaky Gobo selection
		235	-	249	Gobo open
		250	-	255	Gobo wheel rotation
CH8		000	-	255	General Dimmer
CH9	Strobe	000	-	009	no Strobe
		010	-	255	Strobe Speed (slow to fast)

11-CH Mode						
CH1	Mechanic Control	000	-	255	Pan Rotation	
CH2		000	-	255	Tilt Rotation	
CH3		000	-	255	Pan Fine	
CH4		000	-	255	Tilt Fine	
CH5		000	-	255	Motor Running Speed (fast to slow)	
CH6	Light Control	000	-	010	white	
		011	-	021	red	
		022	-	032	orange	
		033	-	043	yellow	
		044	-	054	green	
		055	-	065	blue	
		066	-	076	cyan	
		077	-	087	purple	
088		-	175	colour selection (smooth shift)		
176		-	255	colour wheel rotation (slow to fast)		
CH7	Light Control	000	-	015	Gobo open	
		016	-	124	Gobo selection	
		125	-	234	shaky Gobo selection	
		235	-	249	Gobo open	
		250	-	255	Gobo wheel rotation	
CH8		Strobe	000	-	255	General Dimmer
CH9			000	-	009	no Strobe
CH10		Sound-/Auto-Mode	010	-	255	Strobe Speed (slow to fast)
			000	-	029	control CH1 - CH9
			030	-	055	Auto Mode show 1
	056		-	081	Auto Mode show 2	
	082		-	107	Auto Mode show 3	
	108		-	133	Auto Mode show 4	
	134		-	159	Auto Mode show 5	
	160		-	185	Auto Mode show 6	
	186		-	211	Auto Mode show 7	
	212		-	237	Sound Mode	
238	-	250	Reset			
251	-	255	Sync (Head goes to mid position and blackout)			
CH11	Sound-/Auto-Mode	000	-	255	Speed/Sensitivity (slow to fast / low to high)	