

# GOBO SCANNER 80

## DMX CONTROL TABLE



12 CH Mode						Sub-Group
Ch.	Function	Values				Sub-Group
1	Pan	000	-	255	0% to 100%	Pan
2	Pan fine	000	-	255	0% to 100%	
3	Tilt	000	-	255	0% to 100%	Tilt
4	Tilt fine	000	-	255	0% to 100%	
5	Dimmer	000	-	255	0% to 100%	Dimmer
6	Strobe	000	-	005	Strobe open	Strobe
		006	-	255	Strobe slow -> fast <1Hz - 20Hz	
7	Duration	000	-	255	Flash duration (0ms to 510ms)	Duration
8	Colour Wheel	000	-	005	Colour off (open)	Colour Wheel
		006	-	018	Warm Yellow	
		019	-	031	Lavender	
		032	-	044	Lime	
		045	-	057	Cyan	
		058	-	070	Amber	
		071	-	083	Yellow	
		084	-	096	Blue	
		097	-	109	Green	
		110	-	122	Red	
		123	-	128	Colour Run Stop	
129	-	255	Colour Run Speed slow -> fast / Colour 1 -> 12			
9	GoboWheel	000	-	005	Open	Gobo
		006	-	017	Gobo 1	
		018	-	029	Gobo 2	
		030	-	041	Gobo 3	
		042	-	053	Gobo 4	
		054	-	065	Gobo 5	
		066	-	077	Gobo 6	
		078	-	089	Gobo 7	
		090	-	101	Gobo 8	
		102	-	113	Gobo 9	
		114	-	125	Gobo Shake 1 (Speed 1...6)	
		126	-	137	Gobo Shake 2 (Speed 1...6)	
		138	-	149	Gobo Shake 3 (Speed 1...6)	
		150	-	161	Gobo Shake 4 (Speed 1...6)	
		162	-	173	Gobo Shake 5 (Speed 1...6)	
		174	-	185	Gobo Shake 6 (Speed 1...6)	
		186	-	197	Gobo Shake 7 (Speed 1...6)	
		198	-	209	Gobo Shake 8 (Speed 1...6)	
		210	-	221	Gobo Shake 9 (Speed 1...6)	
		222	-	231	Gobo Wheel rot. Stop	
		232	-	243	Gobo Wheel rot. Slow -> Fast, CW	
		244	-	255	Gobo Wheel rot. Fast -> Slow, CCW	

10	Pan/Tilt Macro	000	-	005	off	Auto Movement
		006	-	040	PAN „small > big“	
		041	-	075	TILT „small > big“	
		076	-	110	PAN / TILT „small > big“	
		111	-	145	PAN / TILT (invers) „small > big“	
		146	-	180	Circle „small > big“	
		181	-	215	Circle (invers) „small > big“	
216	-	255	Random „small > big“			
11	Pan/Tilt Speed	000	-	255	Pan/Tilt Fast -> Slow	Pan/Tilt speed
12	Device settings	000	-	005	no function	Device settings
		006	-	055	Invert Pan on (Hold 3s)	
		056	-	105	Invert Pan off (Hold 5s)	
		106	-	155	Invert Tilt on (Hold 3s)	
		156	-	205	Invert Tilt off (Hold 5s)	
		206	-	255	Reset All Functions (Hold 3s)	

9 CH Mode						
Ch.	Function	Values				Sub-Group
1	Pan	000	-	255	0% to 100%	Pan
2	Tilt	000	-	255	0% to 100%	Tilt
3	Dimmer	000	-	255	0% to 100%	Dimmer
4	Strobe	000	-	005	Strobe open	Strobe
		006	-	255	Strobe slow -> fast <1Hz - 20Hz	
5	Duration	000	-	255	Flash duration (0ms to 510ms)	Duration
6	Colour Wheel	000	-	005	Colour off (open)	Colour Wheel
		006	-	018	Warm Yellow	
		019	-	031	Lavender	
		032	-	044	Lime	
		045	-	057	Cyan	
		058	-	070	Amber	
		071	-	083	Yellow	
		084	-	096	Blue	
		097	-	109	Green	
		110	-	122	Red	
		123	-	128	Colour Run Stop	
129	-	255	Colour Run Speed slow -> fast / Colour 1 -> 12			

7	GoboWheel	000	-	005	Open	Gobo
		006	-	017	Gobo 1	
		018	-	029	Gobo 2	
		030	-	041	Gobo 3	
		042	-	053	Gobo 4	
		054	-	065	Gobo 5	
		066	-	077	Gobo 6	
		078	-	089	Gobo 7	
		090	-	101	Gobo 8	
		102	-	113	Gobo 9	
		114	-	125	Gobo Shake 1 (Speed 1...6)	
		126	-	137	Gobo Shake 2 (Speed 1...6)	
		138	-	149	Gobo Shake 3 (Speed 1...6)	
		150	-	161	Gobo Shake 4 (Speed 1...6)	
		162	-	173	Gobo Shake 5 (Speed 1...6)	
		174	-	185	Gobo Shake 6 (Speed 1...6)	
		186	-	197	Gobo Shake 7 (Speed 1...6)	
		198	-	209	Gobo Shake 8 (Speed 1...6)	
		210	-	221	Gobo Shake 9 (Speed 1...6)	
		222	-	231	Gobo Wheel rot. Stop	
232	-	243	Gobo Wheel rot. Slow -> Fast, CW			
244	-	255	Gobo Wheel rot. Fast -> Slow, CCW			
8	Pan/Tilt Macro	000	-	005	off	Auto Movement
		006	-	040	PAN „small > big“	
		041	-	075	TILT „small > big“	
		076	-	110	PAN / TILT „small > big“	
		111	-	145	PAN / TILT (invers) „small > big“	
		146	-	180	Circle „small > big“	
		181	-	215	Circle (invers) „small > big“	
		216	-	255	Random „small > big“	
9	Device settings	000	-	005	no function	Device settings
		006	-	055	Invert Pan on (Hold 3s)	
		056	-	105	Invert Pan off (Hold 5s)	
		106	-	155	Invert Tilt on (Hold 3s)	
		156	-	205	Invert Tilt off (Hold 5s)	
		206	-	255	Reset All Functions (Hold 3s)	