

STORM FX

DMX CONTROL TABLE



2-CH Mode					
CH1	Auto Programs	000	-	009	Blackout
		010	-	026	AUTO
		027	-	043	AUT1
		044	-	060	AUT2
		061	-	077	AUT3
		078	-	094	AUT4
		095	-	111	AUT5
		112	-	128	AUT6
		128	-	145	Sou0
		146	-	163	Sou1
		164	-	181	Sou2
		182	-	199	Sou3
		200	-	217	Sou4
		218	-	235	Sou5
236	-	255	Sou6		
CH2	Auto Program Speed	000	-	255	Slow to Fast

12-CH Mode					
CH1	Master Dimmer	000	-	255	0% to 100%
CH2	LED 1 Colour	000	-	024	Blackout
		025	-	049	Red
		050	-	074	Green
		075	-	099	Blue
		100	-	124	RG
		125	-	149	RB
		150	-	174	GB
		175	-	199	RGB
		200	-	224	Auto (single colour) Speed slow - fast
		225	-	255	Auto (two colours) Speed slow - fast
CH3	LED1 Strobe	000	-	009	No Function
		010	-	254	Strobe Slow->Fast (max. 10Hz)
		255	-	255	Sound Controlled Strobe
CH4	LED1 Rotation	000	-	004	Stop
		005	-	127	Rotation forwards Fast->Slow
		128	-	133	Stop
		134	-	255	Rotation backwards Slow->Fast

CH5	LED 2 Colour	000	-	024	Blackout
		025	-	049	Blue
		050	-	074	Amber
		075	-	099	White
		100	-	124	BA
		125	-	149	BW
		150	-	174	AW
		175	-	199	BAW
		200	-	224	Auto (single colour) Speed slow - fast
		225	-	255	Auto (two colours) Speed slow - fast
CH6	LED2 Strobe	000	-	009	No Function
		010	-	254	Strobe Slow->Fast (max. 10Hz)
		255	-	255	Sound Controlled Strobe
CH7	LED2 Rotation	000	-	004	Stop
		005	-	127	Rotation forwards Fast->Slow
		128	-	133	Stop
		134	-	255	Rotation backwards Slow->Fast
CH8	Laser Colour	000	-	009	Blackout
		010	-	049	Red
		050	-	089	Green
		090	-	129	Green & Red
		130	-	169	Red On & Green Strobe
		170	-	209	Green On & Red Strobe
		210	-	255	Red & Green (alternating Strobe)
CH9	Laser Strobe	000	-	009	No Function
		010	-	254	Strobe Slow->Fast (max. 10Hz)
		255	-	255	Sound Controlled Strobe
CH10	Laser Rotation	000	-	004	Stop
		005	-	127	Rotation forwards Fast->Slow
		128	-	133	Stop
		134	-	255	Rotation backwards Slow->Fast

CH11	Strobe Programs	000	-	009	Blackout
		010	-	019	Program1
		020	-	029	Program2
		030	-	039	Program3
		040	-	049	Program4
		050	-	059	Program5
		060	-	069	Program6
		070	-	079	Program7
		080	-	089	Program8
		090	-	099	Program9
		100	-	109	Program10
		110	-	119	Program11
		120	-	129	Program12
		130	-	139	Program13
		140	-	149	Program14
		150	-	159	Program15
		160	-	169	Program16
		170	-	179	Program17
		180	-	189	Program18
		190	-	199	Program19
		210	-	255	On
CH12	Strobe (valid if Ch10 200-255)	000	-	009	no function
		010	-	254	Strobe Slow->Fast (max. 10Hz)
		255	-	255	Sound Controlled Strobe