

# SUPERFLY FX

## DMX CONTROL TABLE



2-Channel Mode				
channel	value		Function	
1	000	-	005	Black out
	006	-	090	Derby & Laser Program
	091	-	173	Derby Program
	174	-	255	Laser Program
2	000	-	250	Program speed (slow -> fast)
	251	-	255	Sound mode

8-Channel Mode				
channel	value		Function	
1	000	-	005	Black out
	006	-	090	Derby & Laser Program
	091	-	173	Derby Program
	174	-	255	Laser Program
2	000	-	250	Program speed
	251	-	255	Sound mode
When CH1 value 000-005				
3 Derby	000	-	005	No function
	006	-	020	Red
	021	-	035	Green
	036	-	050	Blue
	051	-	065	White
	066	-	080	Red/Green
	081	-	095	Red/Blue
	096	-	110	Red/White
	111	-	125	Green/Blue
	126	-	140	Green/White
	141	-	155	Blue/White
	156	-	170	Red/Green/Blue
	171	-	185	Red/Green/White
	186	-	200	Green/Blue/White
201	-	215	Red/Green/Blue/White	
216	-	230	Automatic (4-color chase)	
231	-	255	Automatic (7-color chase)	
4 Derby Strobe	000	-	005	No strobe
	006	-	255	Strobe (slow to fast)
5 Derby Motor	000	-	005	No function
	006	-	127	manual Motor position
	128	-	255	Motor rotation speed
6 Laser	000	-	005	Blackout
	006	-	047	Red
	048	-	089	Green
	090	-	131	Red & Green
	132	-	172	Red on & Green strobe
	173	-	214	Green on & Red strobe
215	-	255	Red & Green (alternate strobe)	

7 Laser Strobe	000	-	005	No function
	006	-	250	Strobe (slow-fast)
	251	-	255	Sound strobe
8 Laser Motor	000	-	005	Stop
	006	-	127	Rotate Clockwise, slow to fast
			128	stop
	129	-	255	Rotate Anticlockwise, slow to fast