

SUPERFLY XS

DMX CONTROL TABLE



1-CH Mode					
CH1	Auto Programs	000	-	009	Blackout
		010	-	050	Auto Mix
		051	-	091	Auto Derby
		092	-	132	Auto Strobe
		133	-	173	Sound Mix
		174	-	214	Sound Derby
		215	-	255	Sound Strobe

5-CH Mode					
CH1	Master Dimmer	000	-	255	0% to 100%
CH2	LED Colour	000	-	005	Blackout
		006	-	020	Red
		021	-	035	Green
		036	-	050	Blue
		051	-	065	White
		066	-	080	RG
		081	-	095	RB
		096	-	110	RW
		111	-	125	GB
		126	-	140	GW
		141	-	155	BW
		156	-	170	RGB
		171	-	185	RGW
		186	-	200	GBW
		201	-	215	RGBW
CH3	LED Strobe	000	-	005	No Function
		006	-	255	Strobe 1Hz - 20Hz
CH4	LED Rotation	000	-	005	No function
		006	-	127	Motor indexing
		128	-	255	Motor rotation (slow - fast)

CH5	Strobe Programs	000	-	009	Blackout
		010	-	019	Program1 (slow - fast)
		020	-	029	Program2 (slow - fast)
		030	-	039	Program3 (slow - fast)
		040	-	049	Program4 (slow - fast)
		050	-	059	Program5 (slow - fast)
		060	-	069	Program6 (slow - fast)
		070	-	079	Program7 (slow - fast)
		080	-	089	Program8 (slow - fast)
		090	-	099	Program9 (slow - fast)
		100	-	109	Program10 (slow - fast)
		110	-	119	Program11 (slow - fast)
		120	-	129	Program12 (slow - fast)
		130	-	139	Program13 (slow - fast)
		140	-	149	Program14 (slow - fast)
		150	-	159	Program15 (slow - fast)
		160	-	169	Program16 (slow - fast)
		170	-	179	Program17 (slow - fast)
180	-	255	ON		