

TWINSKAN 20

DMX CONTROL TABLE



1-CH Mode					
CH1	AUTO	000	-	009	Blackout
		010	-	033	AUTO 1 (speed slow - fast)
		034	-	057	AUTO 2 (speed slow - fast)
		058	-	081	AUTO 3 (speed slow - fast)
		082	-	105	AUTO 4 (speed slow - fast)
		106	-	129	AUTO 5 (speed slow - fast)
		130	-	153	AUTO 6 (speed slow - fast)
		154	-	177	AUTO 7 (speed slow - fast)
		178	-	201	AUTO 8 (speed slow - fast)
		202	-	225	AUTO 9 (speed slow - fast)
		226	-	255	SOUND CONTROL (sensitivity 0 - 100%)

3-CH Mode					
CH1	Dimmer	000	-	255	Master Dimmer 0% - 100%
CH2	Strobe	000	-	009	Open
		010	-	255	Stroboscope (Speed 1 - 20Hz)
CH3	AUTO	000	-	009	Blackout
		010	-	033	AUTO 1 (speed slow - fast)
		034	-	057	AUTO 2 (speed slow - fast)
		058	-	081	AUTO 3 (speed slow - fast)
		082	-	105	AUTO 4 (speed slow - fast)
		106	-	129	AUTO 5 (speed slow - fast)
		130	-	153	AUTO 6 (speed slow - fast)
		154	-	177	AUTO 7 (speed slow - fast)
		178	-	201	AUTO 8 (speed slow - fast)
		202	-	225	AUTO 9 (speed slow - fast)
		226	-	255	SOUND CONTROL (sensitivity 0 - 100%)

4-CH Mode					
CH1	Dimmer	000	-	255	Master Dimmer 0% - 100%
CH2	Strobe	000	-	009	Open
		010	-	255	Stroboscope (Speed 1 - 20Hz)
CH3	Tilt (both)	000	-	255	Tilt 0° - 55°
CH4	Gobo (both)	000	-	006	Open
		007	-	012	Gobo 1 / Yellow
		013	-	018	Gobo 2 / Green
		019	-	025	Gobo 3 / Four Colour
		026	-	031	Gobo 4 / Magenta
		032	-	037	Gobo 5 / White
		038	-	044	Gobo 6 / Blue
		045	-	050	Gobo 7 / Orange
		051	-	056	Gobo 8 / GreenYellow
		057	-	063	Gobo 9 / Blue & Green
		064	-	070	Spot shake effect
		071	-	076	Gobo 1 shake effect
		077	-	082	Gobo 2 shake effect
		083	-	089	Gobo 3 shake effect
		090	-	095	Gobo 4 shake effect
		096	-	101	Gobo 5 shake effect
		102	-	108	Gobo 6 shake effect
		109	-	114	Gobo 7 shake effect
		115	-	120	Gobo 8 shake effect
		121	-	127	Gobo 9 shake effect
128	-	189	Gobo change clockwise slow -> fast		
190	-	193	Stop		
194	-	255	Gobo change counterclockwise slow -> fast		

8-CH Mode					
CH1	Dimmer	000	-	255	Master Dimmer 0% - 100%
CH2	Strobe	000	-	009	Open
		010	-	255	Stroboscope (Speed 1 - 20Hz)
CH3	Tilt1	000	-	255	Tilt 0° - 55°
CH4	White1	000	-	255	Dimmer 0% - 100%

CH5	Gobo1	000	-	006	Open
		007	-	012	Gobo1 / Yellow
		013	-	018	Gobo 2 / Green
		019	-	025	Gobo 3 / Four Colour
		026	-	031	Gobo 4 / Magenta
		032	-	037	Gobo 5 / White
		038	-	044	Gobo 6 / Blue
		045	-	050	Gobo 7 / Orange
		051	-	056	Gobo 8 / GreenYellow
		057	-	063	Gobo 9 / Blue & Green
		064	-	070	Spot shake effect
		071	-	076	Gobo 1 shake effect
		077	-	082	Gobo 2 shake effect
		083	-	089	Gobo 3 shake effect
		090	-	095	Gobo 4 shake effect
		096	-	101	Gobo 5 shake effect
		102	-	108	Gobo 6 shake effect
		109	-	114	Gobo 7 shake effect
		115	-	120	Gobo 8 shake effect
		121	-	127	Gobo 9 shake effect
128	-	189	Gobo change clockwise slow -> fast		
190	-	193	Stop		
194	-	255	Gobo change counterclockwise slow -> fast		
CH6	Tilt2	000	-	255	Tilt 0° - 55°
CH7	White2	000	-	255	Dimmer 0% - 100%
CH8	Gobo2	000	-	006	Open
		007	-	012	Gobo1 / Yellow
		013	-	018	Gobo 2 / Green
		019	-	025	Gobo 3 / Four Colour
		026	-	031	Gobo 4 / Magenta
		032	-	037	Gobo 5 / White
		038	-	044	Gobo 6 / Blue
		045	-	050	Gobo 7 / Orange
		051	-	056	Gobo 8 / GreenYellow
		057	-	063	Gobo 9 / Blue & Green
		064	-	070	Spot shake effect
		071	-	076	Gobo 1 shake effect
		077	-	082	Gobo 2 shake effect
		083	-	089	Gobo 3 shake effect
		090	-	095	Gobo 4 shake effect
		096	-	101	Gobo 5 shake effect
		102	-	108	Gobo 6 shake effect
		109	-	114	Gobo 7 shake effect
		115	-	120	Gobo 8 shake effect
		121	-	127	Gobo 9 shake effect
128	-	189	Gobo change clockwise slow -> fast		
190	-	193	Stop		
194	-	255	Gobo change counterclockwise slow -> fast		